


NEW INTERCOM OPERATION INSTRUCTIONS

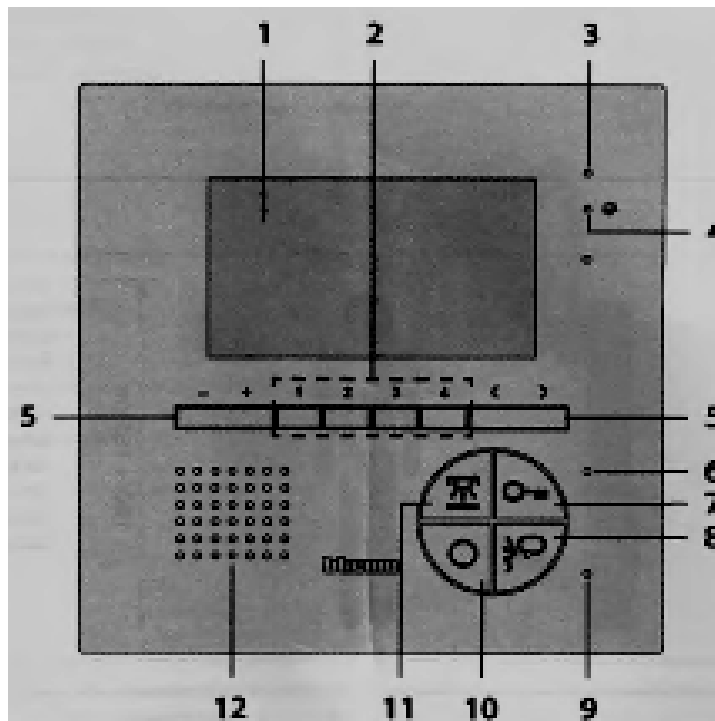

- | | |
|----------------------------------|--------------------------------------|
| 1. Screen | <u>7. Door Release</u> |
| 2. Buttons not used | <u>8. Talk & Turn off Button</u> |
| 3. Microphone | 9. Standby LED – Waiting |
| 4. Mute on | <u>10. Camera Button</u> |
| 5. Up & Down Buttons for Options | <u>11. Lift Release</u> |
| 6. Door release LED | 12. Speaker |

INTERCOM FUNCTIONS:

1. PRIMARY FUNCTION is to accept a call from the door station the “9”LED will flash waiting for you to choose what to do, **talk by pressing the “8”button** when the unit is ringing. **To open the door press the “7”button**, then **to allow up in the lift press the “11”button**. End call by pressing the “8”button or wait till system times out.
2. SECONDARY FUNCTION is to activate the system **by pressing the “10”button which gives you the camera**, then either press the “7”button to allow entry through the door & “11”button to allow access up lift or **press the “8”button to activate the speech and talk to the person at door station**.